



tyco / Fire & Security / **SimplexGrinnell**

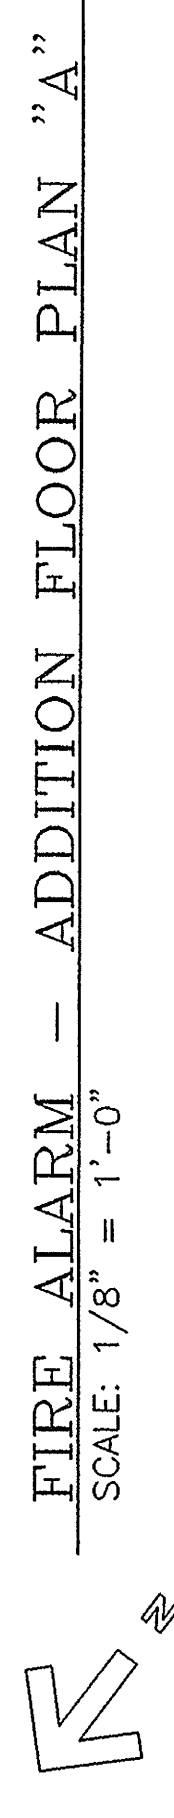

NOTES:

1. LOOP INTO EXISTING HORN AND STROBE CIRCUITS OFF THE EXISTING 4020 FIRE ALARM CONTROL PANEL (FACP). DO NOT T-TAP. IF THE NEW NAC PANEL WILL BE THE LAST DEVICE ON THE CIRCUIT, RELOCATE THE LOOP TO THIS LOCATION AND PULL ONLY ONE 12V OR 24V WIRE, DEPENDING ON THE CIRCUIT TYPE.
2. TIE INTO EXISTING MAPNET SIGNALING LINE CIRCUIT (SLO). THIS CIRCUIT CAN BE T-TAPPED. SHIELD OF NEW WIRE MUST BE TIED INTO SHIELD OF EXISTING MAPNET WIRE. FIELD SELECT THE WIRE TO BE TIED TO THE DESIRED NEW DEVICE. CONTACT SIMPLEX/LENELL FOR ASSISTANCE.
3. TIE INTO EXISTING 24VDC POWER FROM FACP. THIS CIRCUIT CAN BE T-TAPPED.

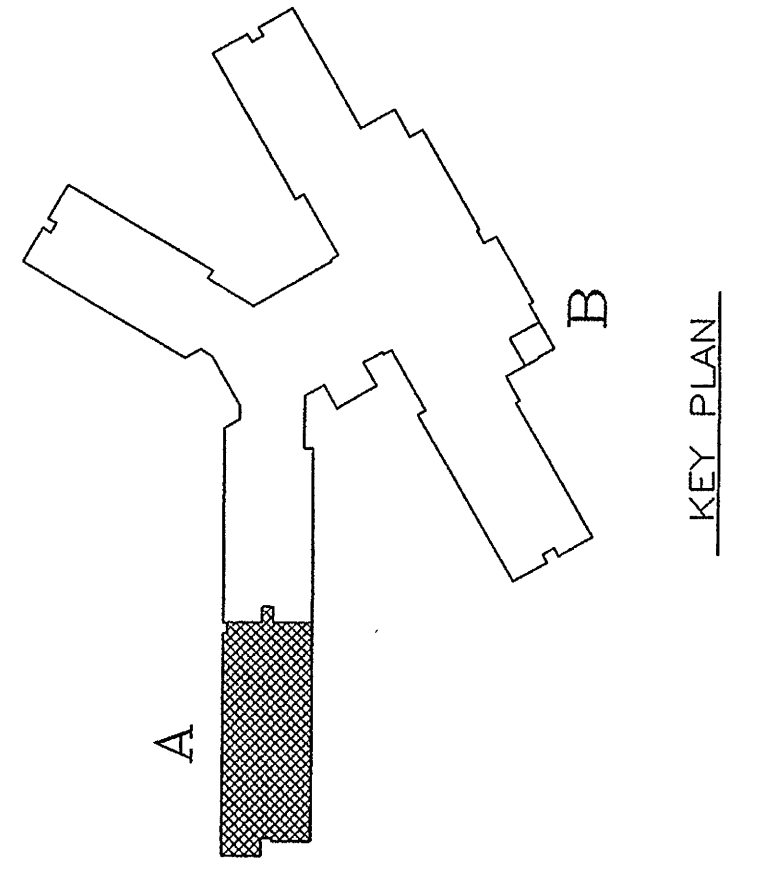

KEY PLAN